

Resources

Care of the Winch

The Seahorse Electric Winch, like all the Seahorse products just needs a good wash down with fresh water to remove salt and sand from the line and frame. Ensure a lot of water is directed at the line, and the bushes either side of the drum. This will remove the sand and much of the salt. Seahorse recommends using Saltaway on the Seahorse products to remove the salt.

Seahorse recommends the battery connectors are cleaned and re-greased periodically (every 6 months). See the Maintenance Section of the manual for instructions.

The drag rubber is subject to wear and will need to be replaced from time to time. These are available from from Seahorse. If the drag rubber is not producing sufficient drag, move the cable tie end up around the winch frame to increase the tension. This will increase the drag.



Winding the Electric winch in by Hand

The Seahorse Electric Winch comes complete with a manual handle just in case. The handle is stored on the winch just below the motor.

To use the manual handle;

Pull the drum pin out

Pull the winch shaft out approximately 10mm to dis-engage the motor.

Line up the second hole in the shaft with the drum and re-insert the drum pin.

Attach the handle to the end of the shaft.

Dig a small hole in the sand to allow the handle to rotate without interference.

Wind.